

230V SFX CONTROLLER

CO2 JETS

POWERSHOTS

STAGE / STADIUM / X-TREME SHOTS



1. Attach Control to power source, power input is on the back of the case. Make sure you have power by checking the power light is on.
2. Connect cables from your SFX Equipment into the numbered outputs on the side of the case.
3. To Fire the equipment, insert and turn the arm key, the arm light will switch on.
4. You can fire each output either independently by holding the numbered control switches down, or you can fire multiple outputs at once using the Master Fire button by switching the control switches up and pressing fire.

WHEN CONTROLLING POWERSHOTS, MAKE SURE YOU HOLD DOWN THE TRIGGER/FIRE BUTTON FOR A GOOD 3-4 SECONDS UNTIL THE ELECTRIC CANNONS FIRE



SAFETY NOTES

- Make sure the Opertaor has full vision of the equipment they are firing.
- Make sure everybody who will be around the area of the equipment is aware of what to expect when fired, and when to expect the equipment to be fired.

TECH INFO

VOLTAGE - 230V
CAPACITY / 6A PER OUTPUT, 16A
OVERALL
CONTROL / 6 OUTPUT MANUAL